

# HERMES

Homing Pigeon Breeding Boxes

## ASSEMBLY INSTRUCTIONS FOR WIDOWHOOD BOXES WITHOUT CONVEYOR BELTS

1



If the box is delivered with a rear panel, insert the panel in the grooves at the back of the side panels. Then, from the top to the bottom, push the rear crossbars with the dimensions 19 x 27 mm onto the metal bolts on the side panels. 5 bars in total. In doing so, the holes in the rear crossbars must always be facing forward.

2



Hang the base panels in the holes provided for this.

3



Press the beech wood perch bars onto the metal bolts on the upright side panels. 4 pieces per section. In doing so the notch on the bars must always point to the back.  
Important: With the box sizes 69.2 cm, 59.2 cm and 54.2 cm, the bars are marked with the numbers 1 and 2. The bars with the number 1 are fitted in the top row of the section. The bars with the number 2 in the second row from the top, and so on.

# HERMES

Homing Pigeon Breeding Boxes

## ASSEMBLY INSTRUCTIONS FOR WIDOWHOOD BOXES WITHOUT CONVEYOR BELTS



4



Now the wire meshes are inserted. The folds must point downwards.




5

With the upright side panels, the plastic hooks for the top panel (cover) must be screwed only into the middle walls.



6

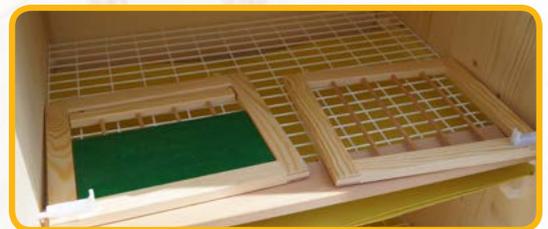

Fit the front doors in the sections. When doing so, the sliding bolt must always point outwards. The coloured front doors are always fitted on the left in the top, middle and bottom rows and always on the right in the second and fourth section rows from the top!

# HERMES

Homing Pigeon Breeding Boxes


## ASSEMBLY INSTRUCTIONS FOR WIDOWHOOD BOXES WITHOUT CONVEYOR BELTS

7



Arrange the front bars with the four plastic hooks in the sections. Important: With the section sizes 69.2 cm, 59.2 cm and 54.2 cm, the bars are marked with the numbers 1 and 2. The bars with the number 1 are fitted in the top section rows. The bars with the number 2 are fitted in the second row from the top and so on.

8

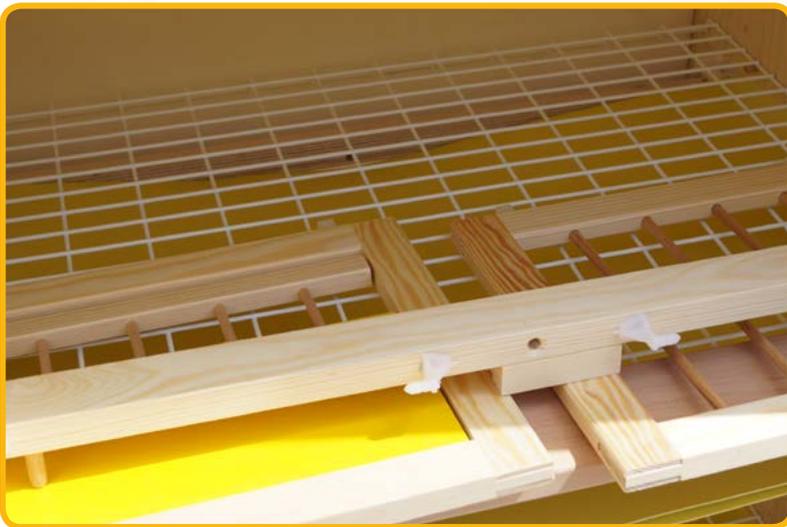

Then from the outside fit the front doors onto the hooks.



9



Fit the front bars with the attached front doors into all the sections.

# HERMES

Homing Pigeon Breeding Boxes

## ASSEMBLY INSTRUCTIONS FOR WIDOWHOOD BOXES WITHOUT CONVEYOR BELTS

10



From above place the top panel into the box.

11



There are two different variants of the middle doors (separating doors). Left-hand separating doors for the top and third section rows from the top, shown here on the left in the picture, and right-hand separating doors for the second and fourth section rows from the top, also shown here on the right in the picture.

12



Insert the separating doors to the right and to the left of the respective sections. Tip: The slider with the hole must always be able to be operated from the open side of the section! The separating door with the dowel in a hole on the inside of the front crossbar.

# HERMES

Homing Pigeon Breeding Boxes

## ASSEMBLY INSTRUCTIONS FOR WIDOWHOOD BOXES WITHOUT CONVEYOR BELTS



13

Pull the front bar forward a little with the left hand and fit the separating door with the right hand. To do so, the dowel with the metal spring must first be inserted in the hole in the crossbar. Then the front dowel on the separating door must be guided into the groove of the front bar. Then move the separating door carefully to the side until this snaps into place in the hole in the front bar. The separating door engages in the notch below in the perch bar.



14

The sectioned box is fully assembled.



15

It must now be aligned using the spirit level and securely screwed to the back wall.

